



### **Mechanical Dock Leveler**

- Inspect lip hinge for damage and lubricate.
- Inspect lip-assist assembly for damage and adjust.
- Inspect lifting springs for damage and adjust.
- Activate leveler for inspection of proper operations.
- Inspect and lubricate main lifting bearings.
- Inspect ramp-control assembly and pawl.
- Inspect upper control bar for damage and lubricate.
- Inspect and lubricate all pivot points per specifications.
- Inspect all deck supports for cracks and damage.
- Inspect, lubricate, and adjust hydracheck lip control.
- Inspect and lubricate below-dock controls.
- Inspect, lubricate, and operate below-dock control.
- Inspect rear hinges for cracks and damage.
- Inspect toe guards for proper operation.
- Inspect weather seals for damage and wear.
- Inspect dock bumpers for wear and damage.
- Inspect pit area and curb steel for damage.
- Clean out all debris in pit area.



**Note:**

Inspection includes an itemized description of all damages and potential problems. ADS provides you with a proposed course of action and a cost for repair. Minor repairs and safety-related problems are repaired during preventive maintenance.